

WHAT EXACTLY COMES WITH THE BEAMGUARD?

The BeamGuard post comes with two threaded rods, two "L"-brackets, two wing nuts, one end cable, and two shackles.

IS THERE A PASS-THRU SYSTEM AVAILABLE?

Yes! Pass-Thru tops are available separately and can be bolted directly on top of the BeamGuard.

WHAT SIZE BEAM FLANGE WILL THE BEAMGUARD FIT?

The BeamGuard comes standard with parts that will fit 4" – 13 3/4" width and 1 1/4" thick.

Parts are available for larger size flanges. Please contact Guardian for specific information.



26513 79th Ave. S.
 Kent, WA
 800-466-6385
 www.guardianfall.com



BeamGuard Safety Post

APPLICATIONS:

For use on steel I beams capable of withstanding 5,000 lbs. Can be used as a personal post or in conjunction with a horizontal lifeline system.

FEATURES:

- Post offset at an angle allowing freedom of movement for workers
- Can facilitate horizontal lifeline systems for up to two workers per section
- Unique post design has a "built-in shock absorber" eliminating the need for shock absorbers in the cable
- 42" high post is the tallest on the market
- Requires no tools for installation
- Available with Pass-Thru Tops
- Powder-coated yellow finish



Pass-Thru Top
 (Sold separately)

INSTALLATION AND PROPER USE:

Install the BeamGuard on top flanges over 4" wide. Maximum two workers between posts. Spacing is 10 – 60 ft. Install any number of posts in a row without interruption. Maximum worker weight is 310 lbs. Read all warnings and instructions before use.

BEAMGUARD MODEL #: 04700

BEAMGUARD PASS-THRU TOP: 04710

Please contact Guardian for all warnings and instructions:
 1-800-466-6385

BeamGuard Safety Posts are tested to meet all applicable ANZI Z359.1 standards and comply with OSHA standards. Use only with compatible equipment.