



BEAMGUARD™



1 Quick Installation

The installation of the BeamGuard™ is designed for simplicity and requires the use of a standard wrench.



2 Easy Set Up

The BeamGuard™ is extremely easy to set up and use. The system requires very little time to set up and can fit flanges over 4" wide.



3 Durable Components

The BeamGuard™ has durable reinforced welds and gussets. The system utilizes all steel and metal components with few loose parts. The system does not require an in-line shock absorber to safely arrest a fall.



Part#	Description	Rod	Base	Flange Hook	Flange Thickness	Flange Width	Weight
04710	Pass-Thru Top	N/A	N/A	N/A	N/A	N/A	N/A
04700	Standard Beamguard™	18"	Standard	Standard	Up to 1 1/4"	4" - 13 3/4"	47.00
04701	Intermediate Beamguard™	24"	Intermediate	Intermediate	Up to 2 1/8"	4" - 19 3/4"	47.00
04702	Large Beamguard™	36"	Large	Large	Up to 3 3/8"	4" - 31 3/4"	50.00

- Mounts to any beam or girder with top flange over 4" wide & up to 3 3/8" thick
- Use Beamguard™ post as a personal anchor or in conjunction with an HLL
- 42" post sits at an angle to allow free movement while walking on the beam
- Posts may be placed 10 to 60 feet apart
- System allows up to two (2) workers in each section
- Pass-Thru Top (04710) available to convert any Beamguard™ to an Intermediate Post